

# announcement

---

## Table of Contents

- Login
- Home Screen
- Vehicles
  - Upload History
  - Status Overview
  - File Overview
- Driver
  - Upload History
  - Status Overview
  - File Overview
- Uploading Data
  - Files
  - Driver Card /Upload Monitor
- Management
  - User
    - Ac
  - Driver
    - Ac
    - Dr
  - Vehicles
    - Ac
  - Fleets
    - Ac
    - Ec
    - W
    - Dr
  - Company
    - Cu
    - Rf
    - Co
    - W
- Reports
  - Vehicles
    - Ve
    - Ve
    - O
    - Fe
  - Driver
    - Dr
    - Vi
    - Re
    - Vi
- LIVE
  - Overview
  - Driver Activities
  - Speed
  - Messages
  - Timeline
- Remote Download (RDL)
  - Remote download - Prerequisites

## Login

1. Log-in to the webportal by entering your customer ID, your user name and your password. You will receive all necessary data from your administrator. By selecting the menu item "Management/User" you are able to change the password.
  2. According to your level of authorization, you are able to access certain functionalities. Your authorization lever will be established by your administrator. If you need access to various functionalities, please ask your administrator.
-